

1. To set the current time:

• Press and hold “Set” button for 3 seconds, enter to the time mode and [HOUR] icon start flashing, press ▼/▲ button to configure the current hour, press “OK” button to confirm; then [MINUTE] icon is flashing, press ▼/▲ button to adjust minutes to current time, press “OK” button when finished.

Notes: Press and hold ▼/▲ can fast forward or backward on selection.

2. To set the frequency of meals:

• After finish time setting, [Numbers] icon for frequency of MEALS will start flashing by pressing “Set” button, to increase or decrease the frequency by pressing ▼/▲ button.

1 means 1 meal per day

1-2 means 2 meals per day;

1-2-3 means 3 meals per day;

1-2-3-4 means 4 meals per day;

1-2-3-4-5 means 5 meals per day;

• After selection, confirmed by pressing “OK” button, LCD automatically enters to feeding time & portion setting of each meal.

• During the setting process, you could press “Manual” button to exit and new parameters will be saved.

3. To set the feeding time and the portions of each meal:

Example A: To set 3 meals per day, and portion as 6 portions – 5 portions – 7 portions, with steps below:

* Each meal serving is adjustable from 1 portion (10g) (~1/10 cup) to 20 portions (200g) (~2 cups).

1. First meal setting:

After you selected 1-2-3 and confirmed by pressing “OK” button, LCD will display 1-2-3.

When digital “1” is flashing firstly, means start of the first meal setting, meanwhile [HOUR] icon start flashing, adjusted by pressing ▼/▲ button and confirmed by pressing “OK” button so that enter [MINUTE] setting, same way to by pressing ▼/▲ button and press “OK” button to confirm; After these, [PORTION] icon will start flashing, pressing ▼/▲ button to select 6 (6 portions) and confirmed by pressing “OK” button

2. Second meal setting

After above Step 1, digital “2” start flashing, means start of the second meal setting now.

When [HOUR] icon start flashing, adjusted by pressing ▼/▲ button and confirmed by pressing “OK” button so that enter [MINUTE] setting, same way to be adjusted by pressing ▼/▲ button and press “OK” button to confirm; After these, [PORTION] icon will start flashing, press ▼/▲ button to select 5 (5 portions) and confirmed by pressing “OK” button.

3. Third meal setting:

After above Step 2, digital “3” start flashing, means start of the third meal setting now.

When [HOUR] icon start flashing, adjusted by pressing ▼/▲ button and confirmed by pressing “OK” button so that enter to [MINUTE] setting, same way to be adjusted by pressing ▼/▲ button and press “OK” button to confirm; After these, [PORTION] icon will start flashing, press ▼/▲ button to select 7 (7 portions) and confirmed by pressing “OK” button.

* To set other mode like 1-2-3-4-5 is same way as above example A.

CAUTIONS

- This product is intended to serve dry food only.
- Do not immerse feeder in water or other liquids.
- Not recommended for puppies or kittens less than 7 months old.
- For indoors use only.
- Feeder should be placed on a leveled surface.
- Do not place anything on top of this feeder.
- Check the level of food frequently to be sure the feeder is dispensing properly.
- Always turn unit off before cleaning before adding food before removing feeder.



CLEANING & STORAGE

1. Before cleaning be sure the switch is turned off.
2. Frequently wash the container and feeding compartments with soap and water before each refill to avoid grease and build up.
3. Base of feeder should not be submerged in water otherwise PCB and components inside might change.

PACKING LIST

- 1 Feeder Body (main housing)
- Screw Rod
- Fixation Column of Screw Rod
- Shield Cap
- Food Container
- Food Container Lid
- Power Cable
- Feeding Bowl
- User Manual

LCD CONTROL PANEL

- Set Button
- Lock Button
- OK Button
- Rec/Play Button
- UP Button
- Down Button
- Vol Button
- Manual Button

Notes:

1. During the setting process, press "Manual" button to exit and new parameters will be saved.

2. During the process of automatic feeding, press "Manual" button to stop dispensing under unlock condition of the screen. (If the screen is locked, please press and hold "Lock" button for 3 seconds to unlock screen and then press "Manual" button).

3. To modify setting:

Press "Set" button, the designed [1-2-3] icon is flashing, to increase or decrease the frequency by pressing **▼▲** button, press "OK" button when finished, then start to modify the time of each meal and the portion of each meal.


During the modification process, you could press "manual" button to exit and new parameters will be saved.

If you want to review the parameters saved in machine:

short press "set" button, to review the parameters of first meal.

short press "set" button again, to reveiw the parameter of next meals.

 
4. To record and play message:

Press "Rec/Play" button for 3 seconds until "Rec" icon  is flashing, then start to record your message (up to 10 seconds), meanwhile, you could release "Rec/Play" button.


When icon flash 3 times means the recording is completed.


Press "Rec/Play" button to check your recorded message, and this recorded message will be automatically played and repeated 3 times at the designed feeding time.

5. To adjust volume:

- Press "Vol" button, icon starts flashing and the machine enter to the volume adjustment mode. Volume could be adjusted by pressing **▼▲** button.
- If the volume was set to 0,  icon will disappear and the product enters into silent condition.

- If the volume is set to 1-3,  icon will show.

- If the volume is set to 4-6,  icon will show.

- If the volume is set to 7-9,  icon will be show.

If there is no any operation within 10 second, LCD control panel will exit without saving.

Note: Please select the volume according to the dimension of your living place.

6. To lock and unlock screen:

- Press and hold "Lock" button for 3 seconds to lock and unlock screen. When idled and not operated within 2 minutes, screen will self-lock.

7. To set manual feeding:

- Press and hold "Manual" button for 3 seconds to start manual feeding, meanwhile release "Manual" button; [PORTION] icon will calculate and show the status of portions has been dispensed; Press "Manual" button again to finish feeding.

 
*Under manual feeding mode, the maximum serving is 40 portions that could help you from re-setting works if there was guest take their own pets visit you.

8. To set the feed at running mode and sleep mode

- If your pet is not at home for a long time, you can turn off the function of automatic feeding.

Press and hold "OK" button for 3 seconds until [PORTION] icon disappear, the machine enter into the sleep mode, means the automatic feeding function is turned off; To wake up the machine from sleeping mode, by press and hold "OK" button for 3 seconds again until [PORTION] icon is flashing.

9. Reminding for battery replacement

1. Low power icon  is flashing.

2. "Low battery" indicator red lighting is flashing

(The frequency is once per second).

3. Micro phone will ring at 7:00am, 8:00am, 19:00pm, 20:00pm and beep 3 times every three seconds, it will continue for a minute.

 
 
HOW TO USE

Operation Steps:



1. To set the current time
2. To set the frequency of meals
3. To set the time and the portions of each meal (up to 5 meals per 24 hours)
4. To modify setting
5. To record and play message
6. To adjust volume
7. To lock and unlock screen
8. To set manual feeding
9. To set the feeder at running mode and sleep mode
10. Note for battery replacement

ASSEMBLY PROCESS



1. Insert the screw rod into screw sleeve, twist and lock into position.

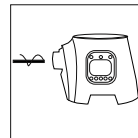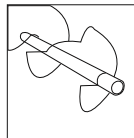

 
 
2. Insert fixation column of screw rod into dispensing port

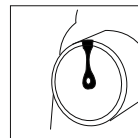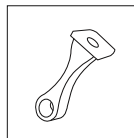

  
3. Insert shield cap along the thread and peg in.

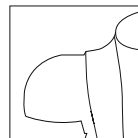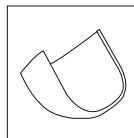

 
 
4. Insert feeding bowl into main housing and hooks into base.

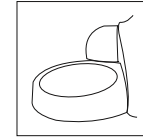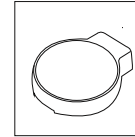

 5. Align and insert food container into feed body, twist and anti-clockwise.

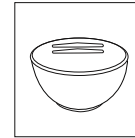

 
 
6. Connect DC5.5*2.1 cable or install 4 pcs D-size battery.

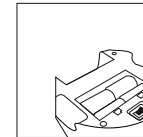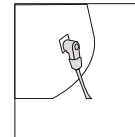



Warning: Placing the batteries in the wrong positive (+) and negative (-) directions will cause the feeder to not work and possibly burn out.

DISASSEMBLY PROCESS

 
 
1. Turn off the power. Remove food container lid by "open" direction rotation. Remove food container by clockwise rotation.

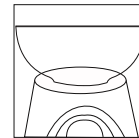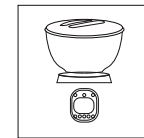

  2. Hold the feed main housing and remove feeding bowl by pushing it up.

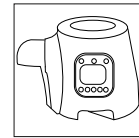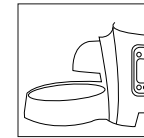

  3. Hold the feed main housing and remove shield cap by pushing it up.

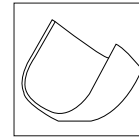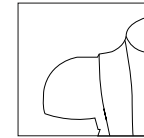

4. Remove fixation column of screw rod.
5. Pull screw rod back out.

